



## **LG Date and Time Change**

Programming has to be carried out from the main attendant Keypad

- You can dial 0 to locate the Attendant keypad
- From the attendant Keypad press TRANS / PGM
- Dial 0, 4,1
- Enter the new Date if required or leave as is
- Press HOLD/SAVE
- Enter time ( HH:MM ) - note the display does not show the change
- Press HOLD/SAVE