



## Setting Daylight Savings

The daylight setting can only be set through the Session Manager application. To program daylight savings:

- Set the Enable Daylight Savings Setting as Yes
- Set the Time Zone correctly - GMT

