



Toshiba DK24/56/96 Date and Time Change

This must be programmed from the main phone (usually x200)

SETTING THE DATE

- Press INT 651
- Dial the date in the format YY/MM/DD
- Press # or LNR

SETTING THE TIME

- Press INT 652
- Dial the time in the format HH/MM/SS
- Press # or LNR

TO SET THE DAY

- Press INT 653
- Dial 653
- Dial the Day
 - 1 = Sunday
 - 2 = Monday
 - 3 = Tuesday
 - 4 = Wednesday
 - 5 = Thursday
 - 6 = Friday
 - 7 = Saturday
- Press # or LNR