



PROGRAMMING SYSTEM SPEED DIALS

The system speed dial numbers are from 60 to 99 or 600 to 699 depending on your system, which can be programmed only from the main phone (usually x10 or x200)

To programme your own numbers:

- Leave the handset down
- Press # then *
- Enter the speed dial code 60 to 99 or 600 to 699
- Dial 9 followed by the number to be stored then #

DIALLING SPEED DIALS

- Lift the handset or press SPKR
- Press * followed by the 2 digit code